How to make direct connection between sMS device and Windows system.

Download tftpd32 and install it. Prepare direct LAN cable.

Example setting to enable DHCP server on you windows system:

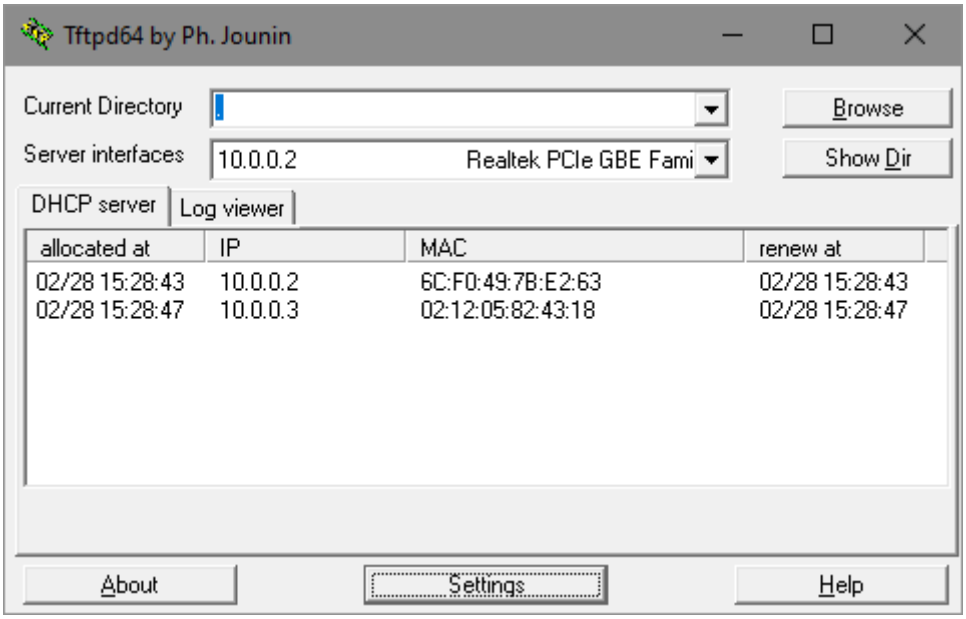

Click a button named 'Settings'

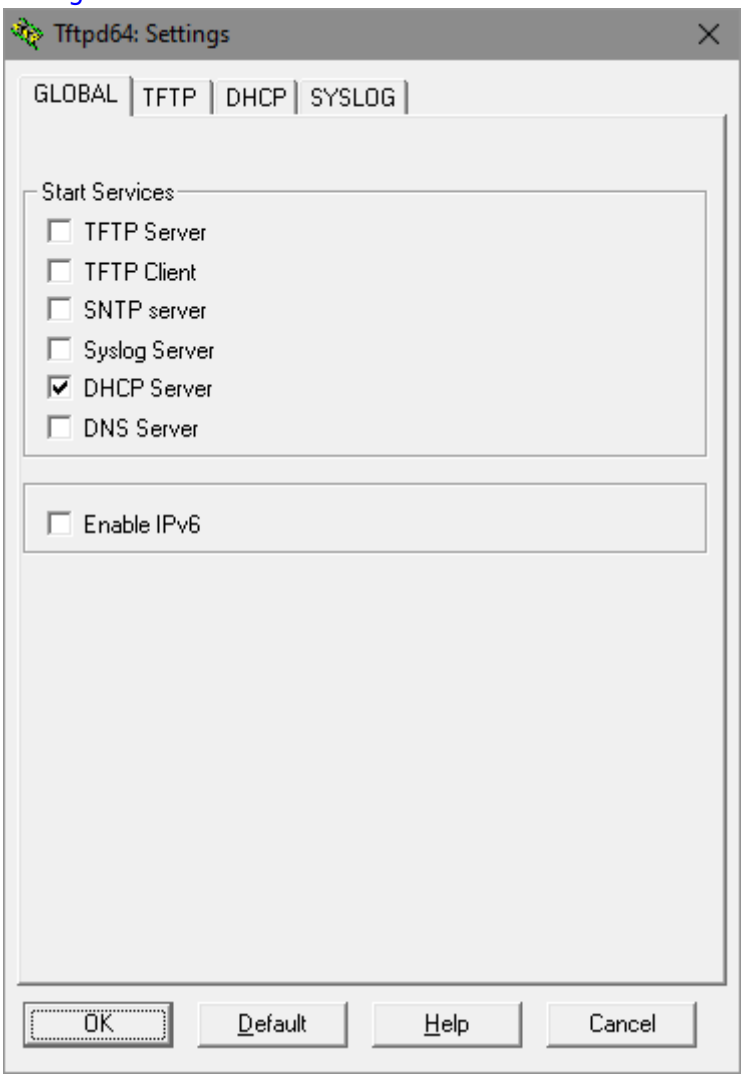

Select DHCP server

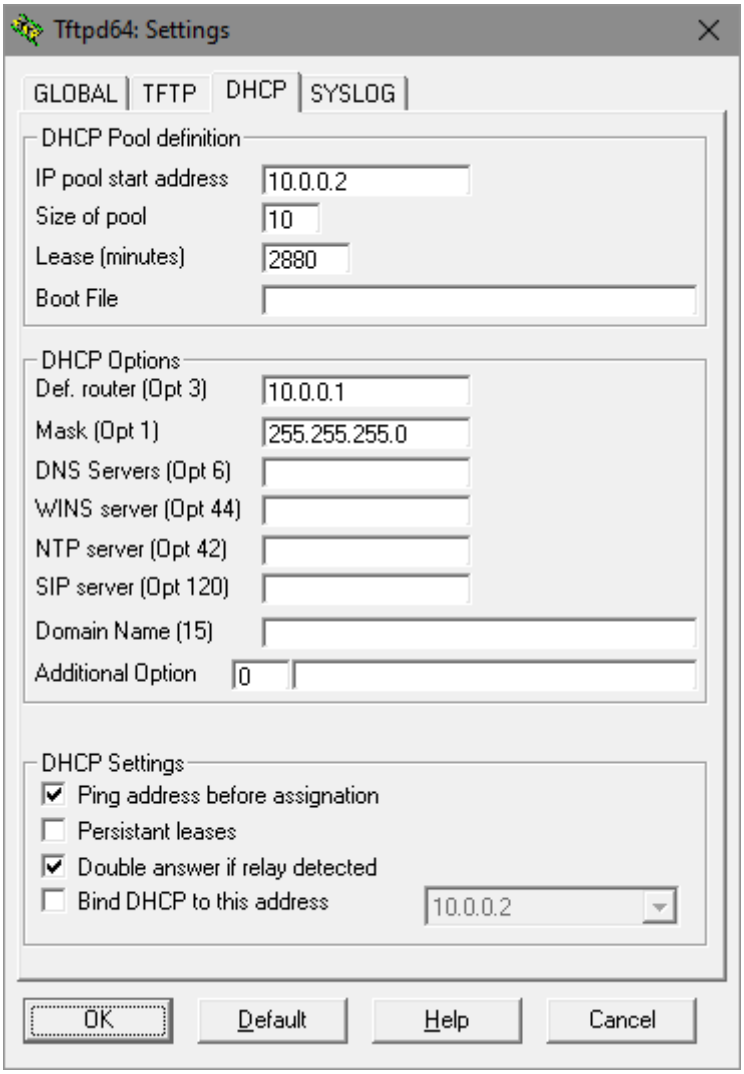

Set configurations like my example or what you want

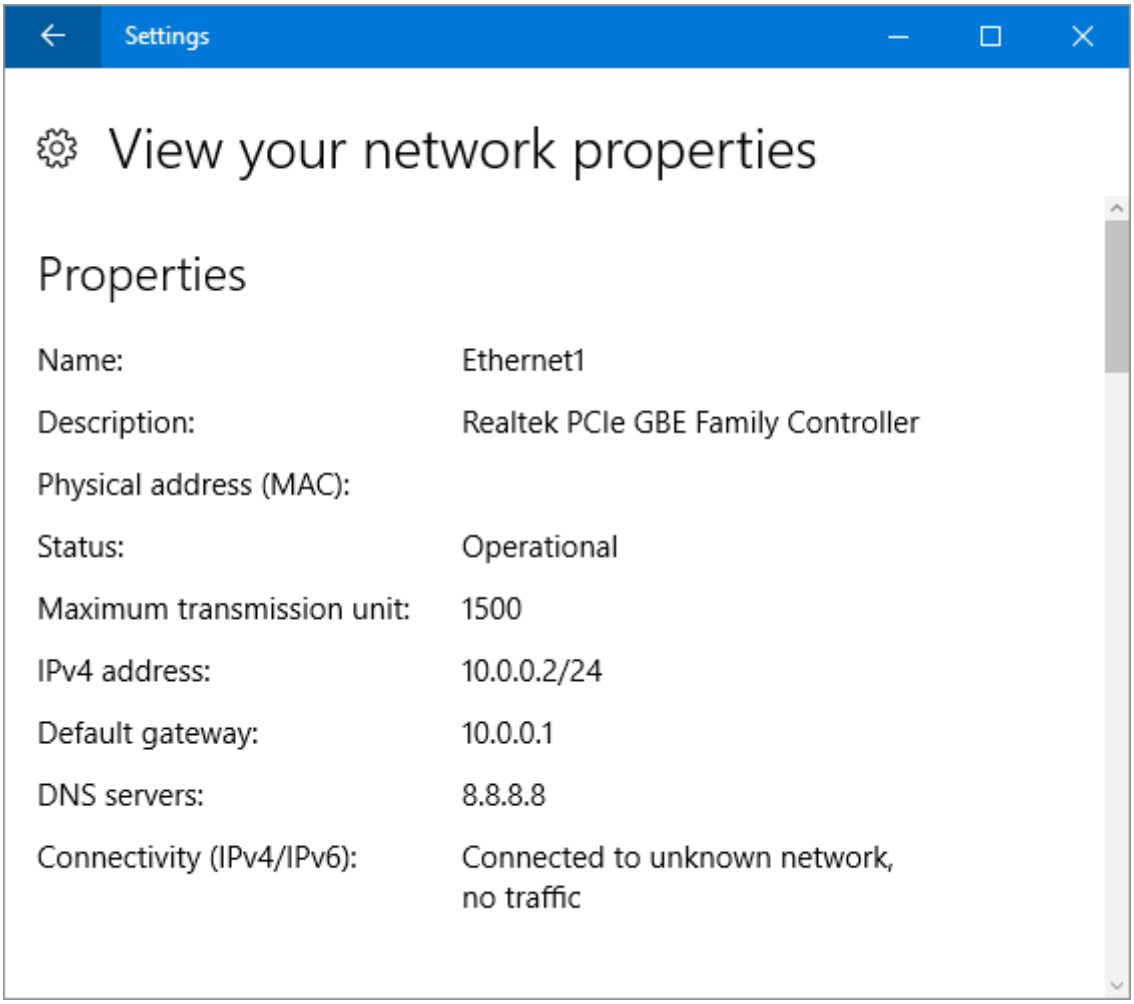

Windows result

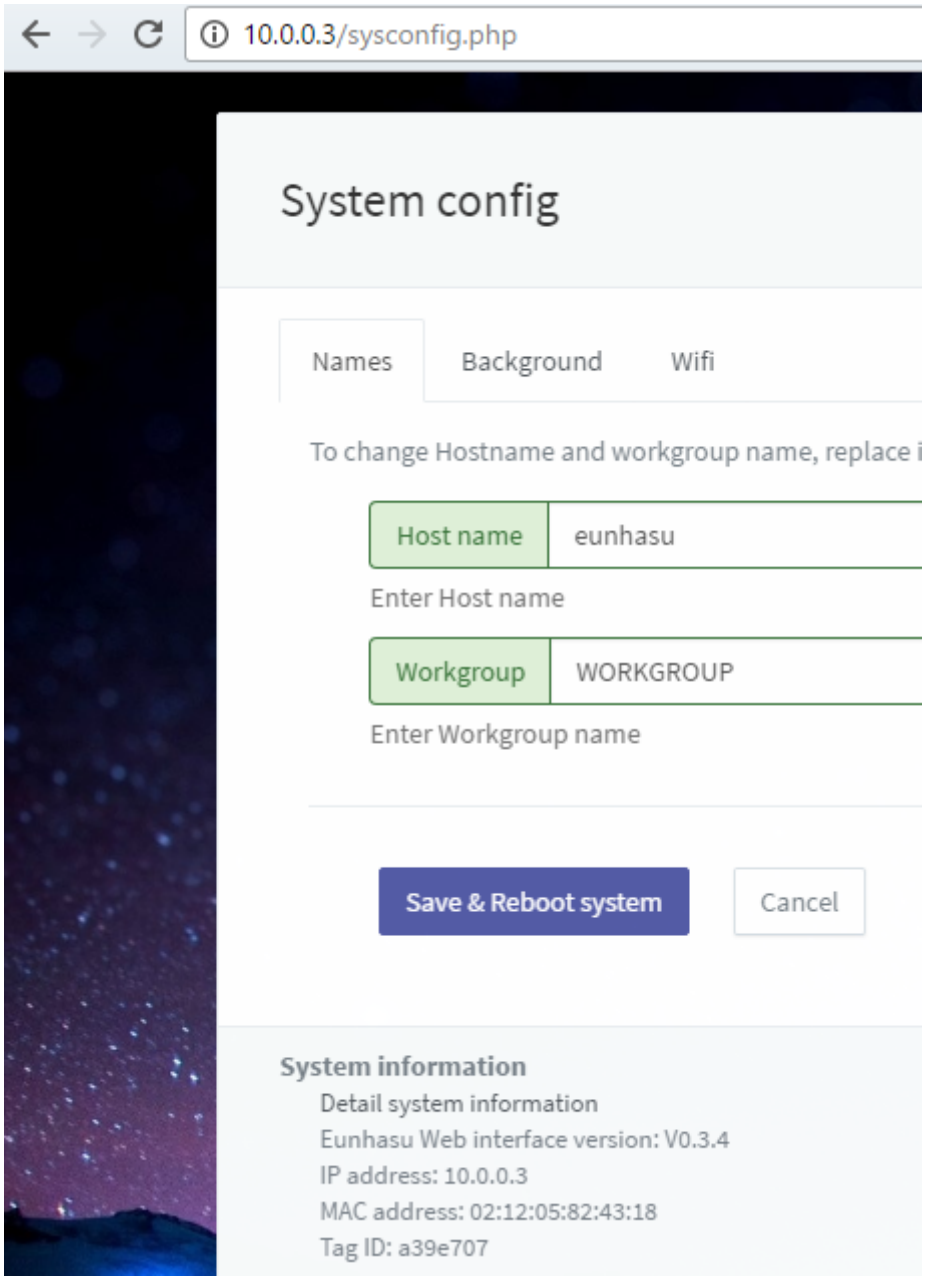

sMS-200 result of dynamic IP allocation

From:
https://docs.sotm-audio.com/ - **SOtM docs**

Permanent link:
https://docs.sotm-audio.com/doku.php?id=en:kb:dhcp_server_for_windows

Last update: **2017/03/10 07:18**